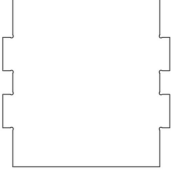

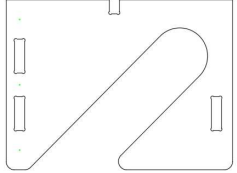



# 'Single Surfboard Rack' Assembly Guide

## Parts

 <p>1 × Part A</p>	 <p>1 × Part B</p>
 <p>2 × Part C</p>	 <p>1 × Part D</p>

## Instruction Guide


It is optional to reinforce parts together using wood glue or screws. Markings are made on the wood to ensure any pilot holes drilled may be done accurately.

Starting Point




Step 1

Slot Part A in the top slots and Part B in the remaining slot of a Part C

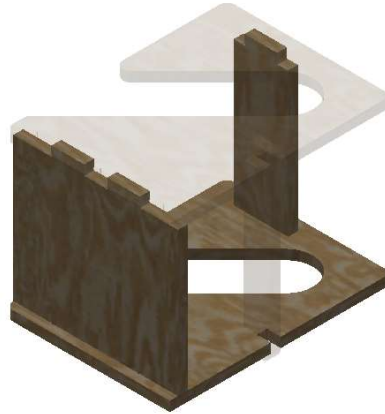

Step 2

Slot the other Part C into the other side of Part A and Part B

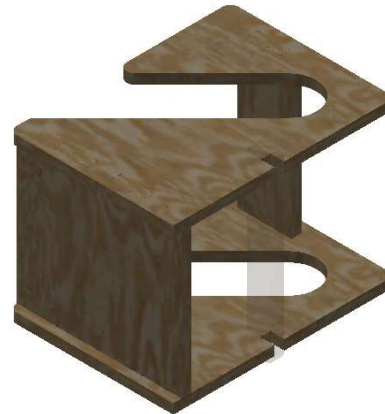

Step 3

Slot Part D into both Part Cs



Step 4

Mount your Board Rack onto a wall using mounting brackets (brackets not provided)